

FENIX
LIGHTING FOR EXTREMES


HM61R V3.0

RELIABLE MULTIFUNCTION
HEADLAMP

1800 LUMENS MAX
OUTPUT

195 METERS MAX BEAM
DISTANCE

The image is a black and white advertisement for the Fenix HM61R V3.0 headlamp. At the top, the Fenix logo is displayed in a bold, sans-serif font, with a stylized star above the 'i'. Below the logo, the tagline 'LIGHTING FOR EXTREMES' is written in a smaller, all-caps font. The central focus is the headlamp itself, shown from a side profile. It features a black, textured headband with 'FENIX' printed on it, a black strap with a buckle, and a black body with a silver-colored lens. The headlamp is positioned horizontally. Below the headlamp, the model name 'HM61R V3.0' is written in a large, bold, sans-serif font. Underneath this, the text 'RELIABLE MULTIFUNCTION HEADLAMP' is written in a smaller, all-caps font. At the bottom of the advertisement, there are two rows of specifications, each preceded by a square icon. The first row has a sun-like icon with rays and the text '1800 LUMENS MAX OUTPUT'. The second row has a beam icon showing a light beam hitting a surface and the text '195 METERS MAX BEAM DISTANCE'. The entire advertisement is set against a dark background.

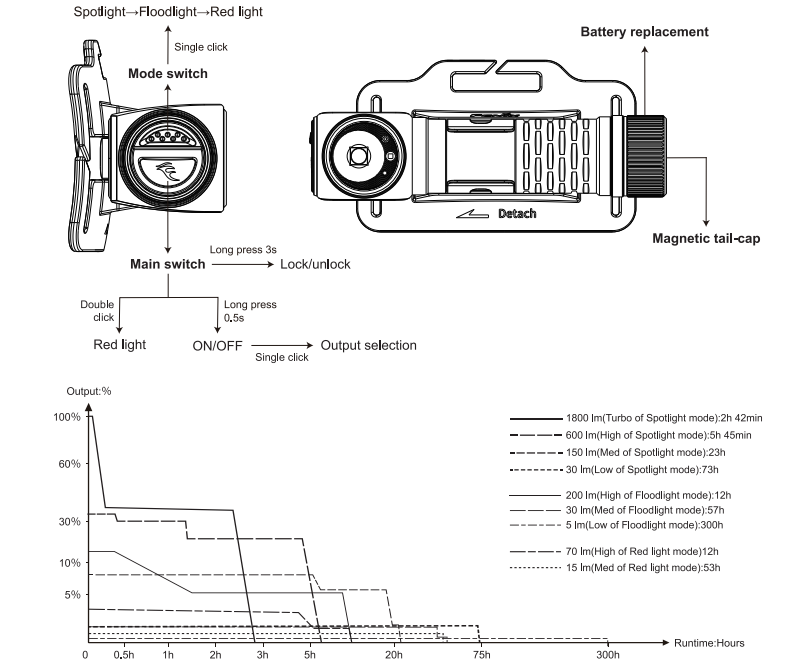

• Lo smontaggio della testa sigillata può danneggiare la lampada frontale e annullare la garanzia.
 • Per evitare l'uso di batterie di ottima qualità.
 • Se la lampada non verrà utilizzata per un lungo periodo, rimuovere la batteria, altrimenti la lampada frontale potrebbe danneggiarsi a causa di perdite di elettricità.
 • Operare e bloccare la lampada frontale o rimuovere la batteria per evitare accensioni accidentali durante lo stoccaggio o il trasporto.
 • L'uso prolungato può causare l'usura dell'ring-ring. Per mantenere una corretta tenuta stagna, sostituire l'ring con un ricambio approvato.
 • La pulizia periodica delle parti della lampada migliora le prestazioni della lampada, poiché i contatti sporchi possono causare scalfi, accensioni intermittenti o mancata accensione, per i seguenti motivi:
 A: Livello della batteria insufficiente.
 Soluzione: ricaricare o sostituire la batteria.
 B: I contatti della batteria e della lampada frontale sono sporchi.
 Soluzione: pulire i punti di contatto con un cotton fioc imbevuto di alcol.
 Se i metodi sopra indicati non funzionano, contattare il distributore.

INCLUSO NELLA CONFEZIONE

Lampada frontale Felix HM5 I-Ring, batteria AR6-14-4000, C-ring di ricambio, cavo di ricarica USB Type-C, manuale utente, scheda di garanzia.

